

Presentation Functions | At a Glance



PowerCom Shortcut keys:

Function Name	Available From	Shortcut
Next Action	Any Screen	Space Bar
S top Polling	Polling Screen	Space Bar or S
Connect B ase	Polling Screen	B
C ontinue Polling	Stop Screen	C
D isplay Chart	Stop Screen	D
Clear Data & R evote	Stop or Display Screen	R
Show / Hide A bsentee	Polling Screen	A
Start / Stop M usic	Polling Screen	M
Start / Stop T imer	Polling Screen	T
I mpromptu Questions	Stop or Display Screen or Non Polling Slide	I
Impromptu New Questions Slide	PowerPoint Slide Show	U
W inners	Display Screen	W
Roll Call/ K eypad Serial# List	Polling Screen	K
Short Messa G e Service	Stop or Display Screen or Non Poller Slide	G
E lection	Stop or Display Screen	E
Polling Detai L	Stop or Display Screen	L
Das H Board	Polling or Stop or Display Screen	H
Blink C orrect Answer	Display Screen	O
Show / Hide Weight	Display Screen	U
Demographic Cut	Display Screen	Alt + Numeric Key
View Priority	Display Screen of Priority Question	Ctrl + Numeric Key

- ▶ Right Mouse click on Poller Box for all available action shortcuts.
- ▶ To display Demographic Analysis, use **Alt + 1** to **Alt + 9** to switch between Demographic question.
- ▶ To display Priority answers in sequence, use **Ctrl + 1** to **Ctrl + 9** to display Priority answer choices.

After Polling Stops or result is displayed, you can use these useful PowerPoint shortcut keys as below:

Function Name	Shortcut
First Slide	Home, 1+ Enter
Last Slide	End
End The Slide Show	ESC , CTRL + BREAK, or HYPHEN
Next Slide	Page Down
Previous Slide	Page Up
Next Action	Space Bar or Next Arrow or Down
Display / Close A Black Screen	B or PERIOD
Display / Close A White Screen	W or COMMA

Notes:

1. PowerCom strongly recommends you to use "Dual monitors with presenter view" for slide show. Please review Dual Monitor with Presenter view help topics before using Dual Monitor display.
2. During the polling all short cut keys are disabled, except SpaceBar and PowerCom applicable short cut keys.
3. When a slide loses focus, the short cut keys may not work properly. In such a situation, click the slide to gain focus and the short cut keys will work again.
4. **Customized Animation on Question Slides:** Use with caution and use more of "With Previous" and "After Previous"

View and Change Address Mode | Keypad No. | Channel No.



Notes for Reply Plus:

1. Do not connect keypads to base when changing the settings.
2. Press Base key  and DEL key  simultaneously to access keypad menu, press the soft key right and left button to locate the menu items.

View and Change Address Mode:

Note: Power off and on keypad after change address mode to alter the settings.

	Address Mode	View Keypad Mode	Change Keypad Mode
Keypad Plus	Static mode	When keypad is powered on, LCD will display Welcome and keypad ID.	Enter keypad menu, locate keypad Mode, to set address Mode.
	Dynamic mode	When keypad is powered on, LCD will display "Searching For Bases..."	
Keypad Mini+	Static mode	Use WRS960X-T trainer	Use WRS960X-T trainer
	Dynamic mode	See note below:	

View and Change Keypad No.:

	Address Mode	View Keypad No.	Change Keypad No.
Keypad Plus	Static mode	When powering on keypad, LCD will display Keypad ID	Enter keypad menu, use Softkeys to locate Address, use Numeric keys set up Keypad Number, finally press SEND to save.
	Dynamic mode	Power on keypad and connect Base, then press Base key and LCD will display keypad ID	System will automatically assign Keypad ID after user selects the channel.
Keypad Mini+	Static mode	Use WRS960X-T trainer	Use WRS960X-T trainer
	Dynamic mode		System will automatically assign Keypad ID after user select the channel.

View and Change Keypad Channel:

	Address Mode	View Keypad Channel	Change Keypad Channel
Keypad Plus	Static mode	When powering on keypad, press Base key, and LCD will display keypad Channel.	Enter keypad menu, use Softkeys to locate Base ID, use Numeric keys to set up Keypad Number, finally press SEND to save.
	Dynamic mode		System will automatically display all available channel ID, user will select the channel and then press SEND key (or middle softkey) to connect.
Keypad Mini+	Static mode	Use WRS960X-T trainer	Use WRS960X-T trainer
	Dynamic mode		Press LINK key, then enter 2 digit channel ID and press SEND key.

► **Address Mode:** Both the base and the keypads must be configured to the same mode, as they are not interoperable.

Note: Use WRS960X-T Trainer to view and change Reply Mini+ Keypad Mode, Base ID, and address Mode.