

Presentation Functions | AT a Glance



■ PowerCom Shortcut Keys:

Function Name	Available From	Shortcut
Next Action	Any Screen	Space Bar
S top Polling	Polling Screen	Space Bar or S
Connect B ase	Polling Screen	B
C ontinue Polling	Stop Screen	C
D isplay Chart	Stop Screen	D
Clear Data & R evote	Stop or Display Screen	R
I mpromptu Questions	Stop or Display Screen or Non Polling Slide	I
Impromptu New Questions Slide	PowerPoint Slide Show	U
Show / Hide A bsentee	Polling Screen	A
Start / Stop M usic	Polling Screen	M
Start / Stop T imer	Polling Screen	T
W inners	Display Screen	W
Das H Board	Polling or Stop or Display Screen	H
Polling Detail L	Stop or Display Screen	L
Blink C orrect Answer	Display Screen	O
K eypad Serial# List	Display Screen	K
Show / Hide Weight	Display Screen	U
Demographic Cut	Display Screen	Alt+Numeric Key

▶ Right Mouse click on Poller Box for all available action shortcuts.

▶ To display Demographic Analysis, use Alt + 1 to Alt + 9 to switch between Demographic questions

■ After Polling stops or result is displayed, you can use these useful PowerPoint shortcut keys shown below:

Function Name	Shortcut
First Slide	Home, 1+ Enter
Last Slide	End
End The Slide Show	ESC , CTRL + BREAK, or HYPHEN
Next Slide	Page Down
Previous Slide	Page Up
Next Action	Space Bar or Next Arrow or Down
Display / Close A Black Screen	B or PERIOD
Display / Close A White Screen	W or COMMA

Notes:

1. PowerCom strongly recommends to use "Dual monitors with presenter view" for slide show. Please review Dual Monitor with Presenter view help topics before using Dual Monitor display.
2. During the polling all short cut keys are disabled, except SpaceBar and PowerCom applicable short cut keys.
3. When a slide loses focus, the short cut keys may not work properly. When this occurs, click the slide to gain focus, and the short cut keys will work again.
4. Customized Animation on Question Slides: Use with caution and use more of "With Previous" and "After Previous" than "On Click" as Start of animation.





View and Change Keypad No. & View and Change Channel No.

■ View and Change Keypad No.:

	View Keypad No.	Change Keypad No.
Reply Worldwide	Hold Clr + 1 Release Clr, Enter *or Hold Clr + 9 5 1 Release Clr, Enter*.	Hold Clr + 9 5 1 Release Clr,enter keypad as 3 digits
Standard Reply (Synthesized Keypad)	Hold Clr till it blinks then let go, keypad shows as 3 digits.	Hold Clr till it blinks then let go, enter keypad as 3 digits
Standard Reply (Non-Synthesized Keypad)	Hold Clr till it blinks then let go, keypad show as 3 digits	Hold Clr till it blinks then let go, enter keypad as 3 digits
Reply Mini	Use WRS960X-T trainer or See note below:	Use WRS960X-T trainer

■ View and Change Channel No.:

	View Channel	Change Channel
Reply Worldwide	Hold Clr + 2 Release Clr, Enter * or Hold Clr + 9 7 3 Release Clr, Enter *	Hold Clr + 9 7 3 Release Clr,enter keypad as 2 digits.
Standard Reply (Synthesized Keypad)	Hold Clr + 9 7 3	Hold Clr + 9 7 3 Release Clr,enter keypad as 2 digits.
Standard Reply (Non-Synthesized Keypad)	Hold Clr + 9 7 3	Can not change
Reply Mini	Use WRS960X-T trainer or See note below:	Use WRS960X-T trainer

NOTE: To view Reply Mini Keypad Number and Channel:

Press the 1 and 5 key simultaneously for 3 seconds.

A green LED flash represents the numerical values separated by the red LED indicator.

For detail please see online help topic "[How to use Reply Mini with PowerCom Reply Worldwide](#)" for the format.

► You can change [Base Station Channel](#) via using PowerCom:

1. Start PowerPoint, Click PowerCom Ribbon>"Start Base" to [Start Base Station](#).
2. Plug in base station USB cable to your computer, then click "[Find Base Station](#)" button.
3. After PowerCom locates the base station, simply change the channel number, then press enter. Now the channel is changed.