 


VR-5 AV MIXER & RECORDER
Dedicated File Conversion Software
VR-5 Image Converter
for Windows

Reference Guide

This document describes the dedicated file conversion software “VR-5 Image Converter”.

* For details on the operation requirements of this software, refer to “System Requirements” (p. 2).

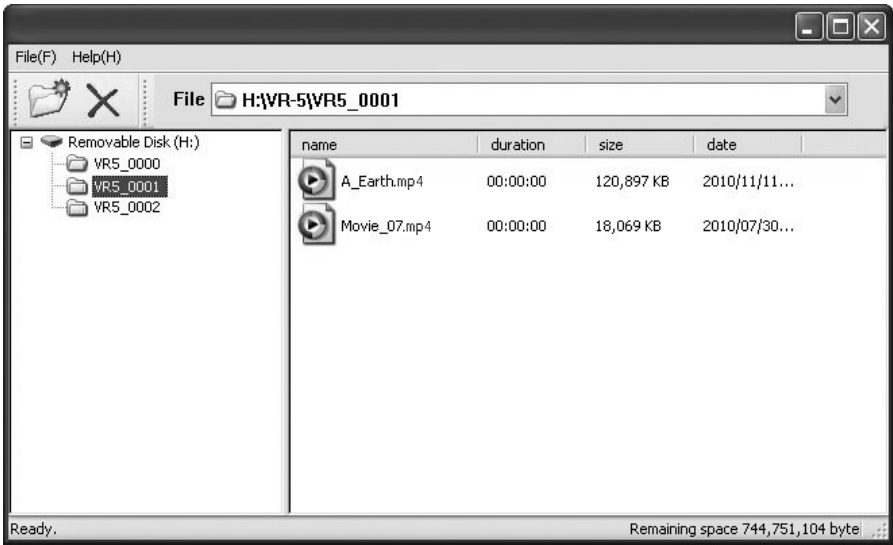

* The screens shown on this document were captured from a version under development. The diagrams in this tutorial may differ from the version you have downloaded.

Roland Corporation and its affiliates assume no responsibility for any loss or damage (including loss of profits, loss of data or other economical losses) caused by use of this software. This is applicable even in case users were notified from Roland Corporation or its affiliates about possibility of such losses.

Copyright © 2011 ROLAND CORPORATION

All rights reserved. No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.

* Microsoft and Windows are trademarks or registered trademarks of Microsoft Corporation in the U.S.A. or other countries.

* Pentium and Celeron are trademarks or registered trademarks of Intel Corporation.

System Requirements

The destination computer must meet the requirements described below.

- * This program has been confirmed to run on commercially available standard computers that meet the conditions below. But operations under these conditions in all cases are not assured. Please be aware that even on computers meeting these requirements, processing capability may vary due to differences in device-specific settings or specifications, or usage environment.

Operating System

- Windows XP Service Pack 3 or later
- Windows Vista Service Pack 2 or later
- Windows 7
- * This software does not work on 64-bit edition of Windows.
- * This software does not work on Windows XP Media Center Edition.

CPU

- Pentium (R) /Celeron (R) 1.8 GHz or higher.

Memory (RAM)

- 512 MB or more

Graphics

- 1024 x 768 dots or better
- 65,536 colors (16-bit color) or more

Starting up/Quitting VR-5 Image Converter

1. Load an SD card formatted on VR-5 to computer

Before starting up this software, load an SD card formatted on VR-5 to your computer. Without a VR-5 formatted SD card loaded onto your computer, the software will not operate properly.

2. Start up VR-5 Image Converter

Double click the "VR-5 Image Converter" icon created during the installation process to start up this software.

- * For details on computer operations, refer to owner's manual for your computer.

3. Quit VR-5 Image Converter

When you quit this software, click the close box located in the right-upper corner of the window or select [Quit] in File menu.

NOTE

This software can recognize SD cards formatted on the VR-5 only. Format SD card on the VR-5 before using on this software.

 
NOTE

This software cannot recognize multiple SD cards simultaneously. Do not load multiple SD cards to your computer when you use this software.

This product is using the open source license (GPL/LGPL) software. You have the right to acquire, modify and distribute the source code for this open source license software. You can obtain the open source license source code used in this product by downloading it from the following website :

<http://www.roland.com/support/gpl/>

Items and Their Functions

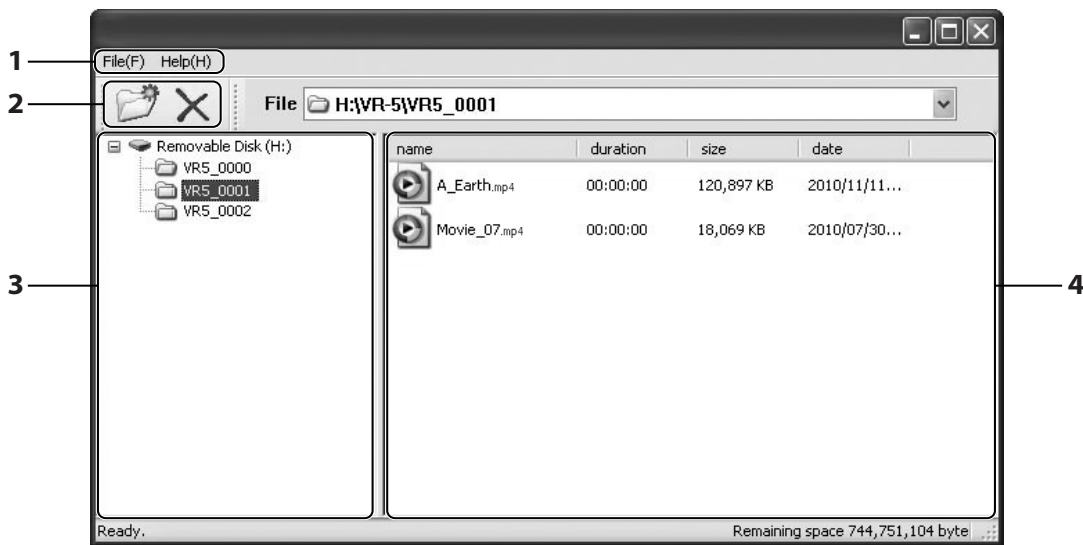

1. Menu

In the File menu, you can perform the following:

- Select "Setup" to execute the followings.
 - NTSC/PAL According to setup of your VR-5 unit, you can select NTSC or PAL.
 - Letterbox Top/bottom letterboxes will be added if this is checked and a file of 16:9 aspect ratio is converted. A 16:9 material will be squeezed to 4:3 if this is not checked and converted. Files of 4:3 aspect ratio will have no effect even if this is checked.
 - 2 pass encode (video) Check this when you convert a high bit-rate video file.
- Select "Quit" to quit this software.

In the Help menu, you can perform the following:

- "Help" opens owner's manual (this document) in PDF form.
- "Info" displays the version number of this software.

2. Function Icons

You can perform the following:

- Creating a new folder.
- Deleting a file
- * For details of operations, refer to "Other Functions" (p. 7)

3. Folder View

Displays the list of folders contained in the loaded SD card. Click a folder to display files contained in that folder on File View.

4. File View

Displays the list of files contained in the folder selected on Folder View. When you perform file conversion, drag and drop to or from this area.

- * The icon displayed here differs depending on the software installed to your computer.

Converting Files for Playback on the VR-5


You can convert movie, still image or audio files to the formats supported by the VR-5 for playback.

1. Prepare a source file

Prepare a source file (movie, still image or audio) on your computer.

2. Select a folder to contain


Click on an available folder in Folder View. The contents of the selected folder are displayed on File View.

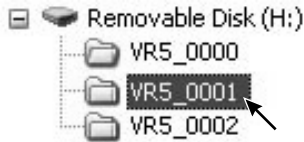

3. Drag and drop the file

Drag and drop the file you prepared on step 1 to File View to start conversion. Once the file conversion process is finished, the converted file will begin copying to the SD card.

 - * You can drag and drop multiple files to File View at one time.
- * Different progress bars appear while converting and while copying.
- * Click [Cancel] on dialog to cancel conversion or copying.

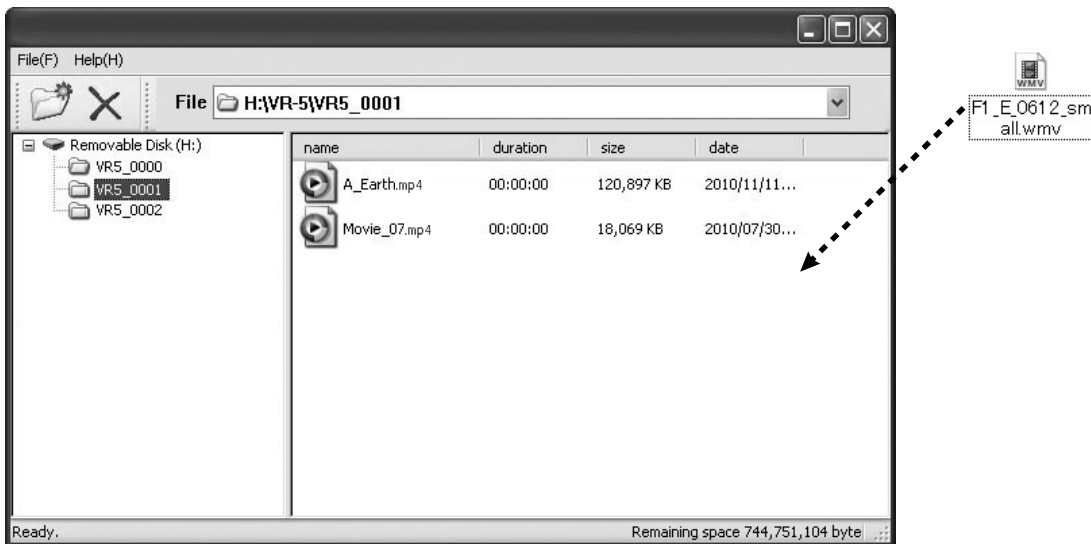

NOTE

You cannot drag and drop new file(s) until conversion/copying process of the dragged file(s) is completed.

Supported File Formats

This software can convert the following file formats to formats supported by the VR-5 for playback. You cannot drag and drop files other than these formats to File View.

Movie

- Size 1920 x 1200 pixels or smaller
- Formats .avi, .mpg, .wmv, .mp4, .dv, .mov

Still Image

- Size 6400 x 4800 pixels or smaller
- Formats .bmp, .jpg, .png

Audio

- Sampling 44.1 kHz, 48 kHz
- Formats .wav, .aiff, .mp3

Converting Recorded Files for Playback on Computer

You can convert video files recorded on the VR-5 for playback on your computer. Converted files will be copied from SD card to your computer.

 
1. Select a folder that contains source file

Click to select a folder that contains your recorded video file(s) on Folder View. The contents of the selected folder are displayed on File View.

2. Drag and drop the file

Drag and drop your recorded video file(s) from File View onto your desktop or into any folder you desire. The converting and copying process will begin automatically

- * You can drag and drop multiple files to File View at one time.
- * The dialog shows two different progress bars while converting and copying.
- * Click [Cancel] on dialog to cancel converting/copying.

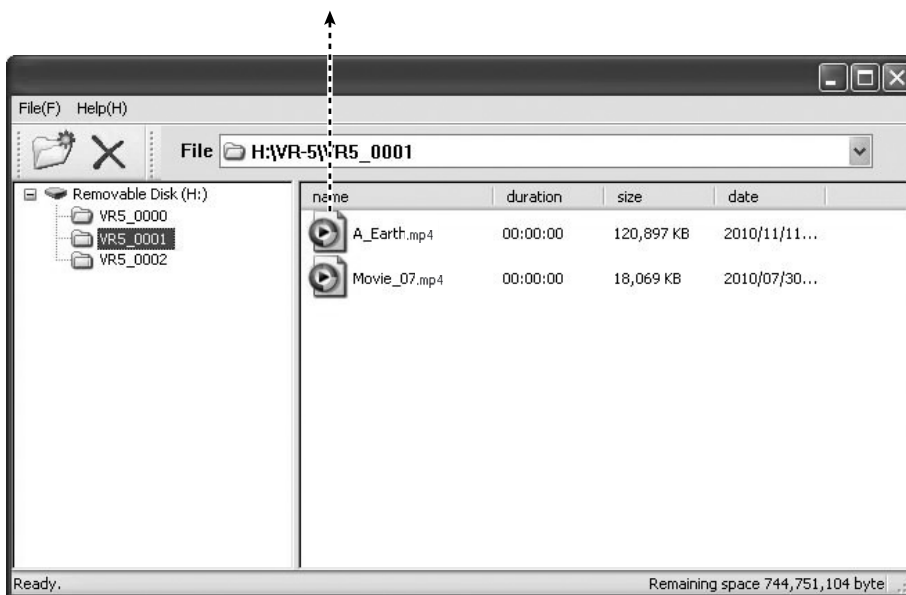

NOTE

You cannot drag and drop new file(s) until converting/copying process of the dragged file(s) is completed.

 
About Format of the Converted Files

The movie file(s) dragged and dropped from the File View will be converted to .wmv files. The bit rate differs depending on settings of VR-5.

Other Functions

Creating a New Folder

Click the New Folder Icon to create a new folder in Folder View.

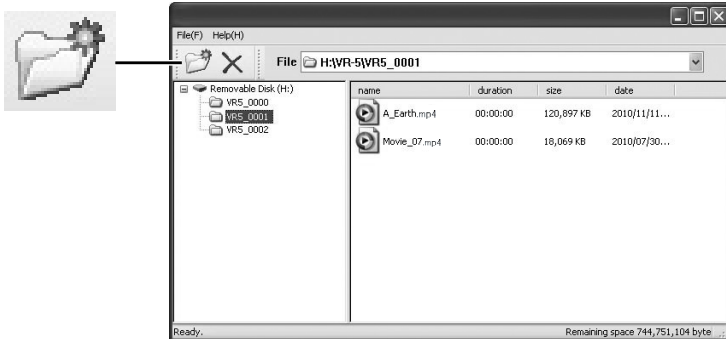


A new folder is created on your SD card. It will be automatically given a new folder name with a sequential number.

Deleting a File

Select a file and click [X] icon to delete the file.

 * You cannot delete folders.

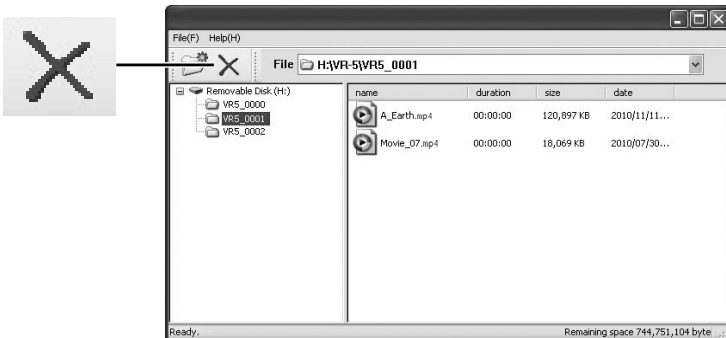

When you click [X] icon, the below dialog appears. Click [OK] to delete the selected file.

